


# Installing instructions

## How to cut a DW-pipe element

- 1) Pull apart inner and outer tube

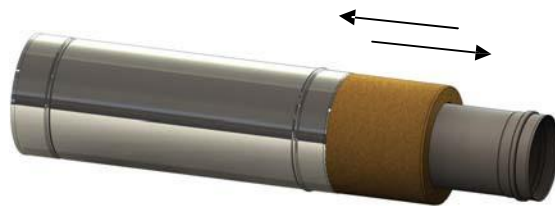

- 2) Mark required length (The pipe ends with the female part will be needed!)



- 3) Cut inner and outer tube




4) Debur cutting edges



5) Cut insulation  
(Cut the same length off the insulation as the length of the waste part of inner or outer tube)



6) Put back together tubes and insulation

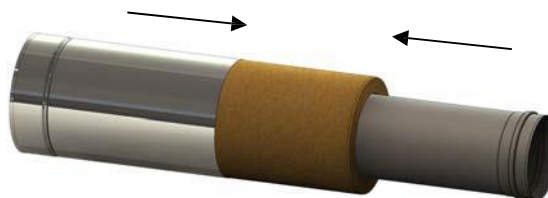

**BEFORE**



**AFTER**

